

## EvoCharge Charger – Communication Module Removal Guide

**⚠ Safety First:** Always ensure the charger is completely disconnected from the power supply before beginning any maintenance.

### Step 1: Remove the Top Screws

- Unscrew the **two small screws** located at the top of the charger.



### Step 2: Remove the Charger Cover

- Gently press on the sides of the charger where the **cover latches** are located.
- Carefully lift and remove the charger cover.



**Step 3: Unscrew the Main Charger Screws**

- Remove the **six screws** securing the main charger body.



**Step 4: Locate the Communication Module**

- **Lift the charger cover to reveal the communication board/module underneath.**



### Step 5: Remove the Communication Module

- Unscrew the **three screws** holding the communication module in place.
- Carefully lift the module off the main board, ensuring no components are damaged.





P-13337041 REV B  
E-2567041 Q

EVOCHARGE™


REV NO: 17-21074-02  
PCA NO: 1A-21074-02  
SR NO:

© 2019 EVOCHARGE Company

INSPECTED  
DANGER  
High Voltage

### Step 6: Final State

- After removal, your charger should resemble the configuration shown in the reference images (if available).

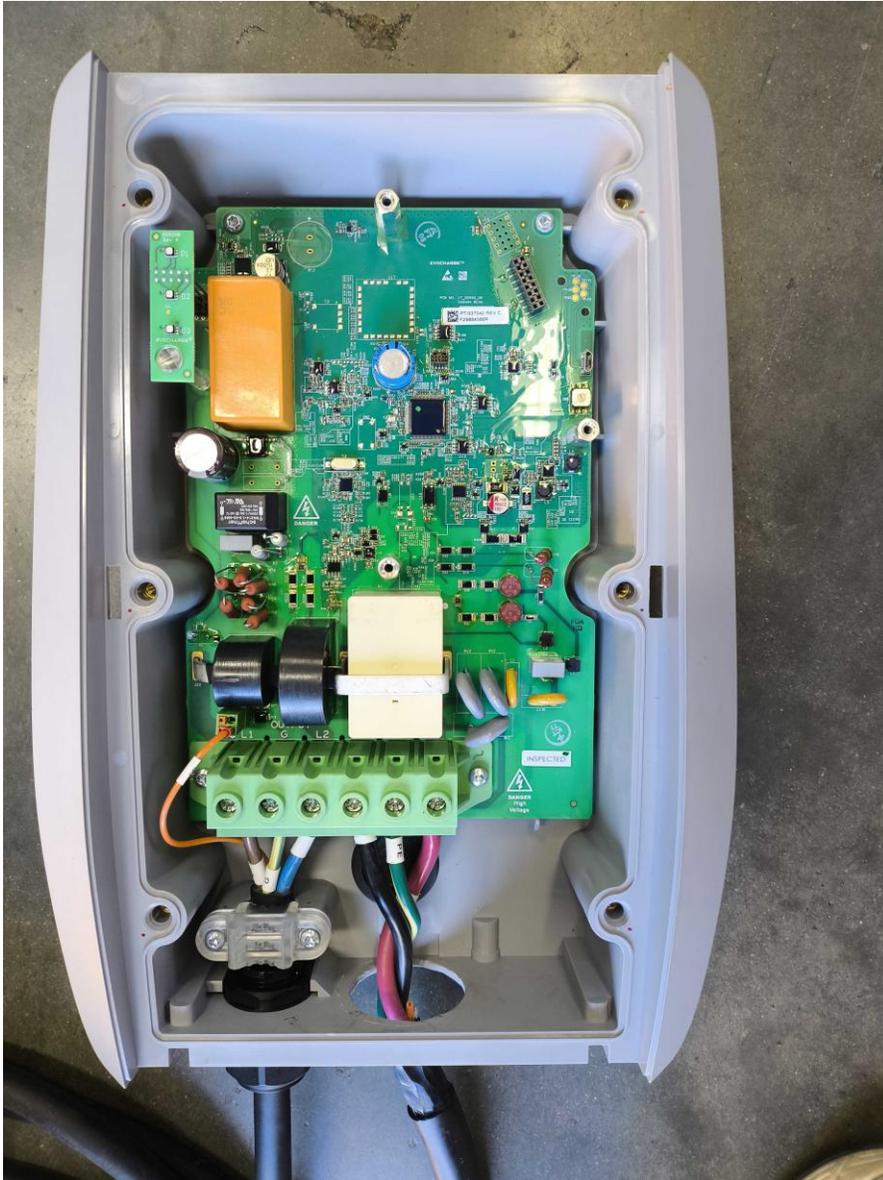

### Step 7: Reassembly

- Reattach the **charger cover** and **front panel**.
- Once reassembled, the charger can be safely reconnected. It will operate in **Plug & Charge mode**.